

INSTRUCTION SHEET

Woodstock
Fountainsia® Water Sculptures
Outdoor/Indoor Fountains
Item # 30551, 30552, 30553, 30557, 30558, 30559 and 31500

Completely unpack all the fountain parts. You should have a base, top section, pump, rubber water supply tube, LED light and transformer. *Item # 31500 does not include the LED light and transformer.*

- Both the pump and light cords need to be run down through the white plastic tube and out the bottom of the base. To do this first remove the black plastic cap from the tube. Then unplug the transformer from the light cord. Using one of the twist ties from the packaging, tie the plug ends of the two power cords together. Doing this will make it easier to thread the thinner light cord through the tube. Now thread both cords through the tube and out the bottom, leaving enough wire so the pump can sit on the bottom of the base. Replace the black plastic cap, making sure the cords are set into the notch at the top of the tube and the cap is aligned properly.
- Place your fountain on a hard, level surface. Make sure it is a surface that will not be damaged by moisture.
- Fill the reservoir about 1/3 full with distilled water. If you have model # 31500 make sure to fill the open bowl area 1/2 full.
- Clean the top section with a mild solution of soapy water. This will clean off any residual granite dust and facilitate the even flow of water over the entire upper section of the fountain. Rinse the soap off, but do not allow the upper section to dry.
- Set the flow control on the front of the pump to the slowest setting. After the initial startup this can be adjusted higher. Care should be taken not to set it too high as this may cause splashing
- Place the top section onto the base. Make sure the water supply tube is securely connected to the LED light holder by means of the black plastic adaptor. *Item # 31500 includes only the rubber tube that must be fitted into the center hole of the upper section.*
- While the top section is still completely wet, plug the pump and the LED light (*doesn't apply to #31500*) into any GFCI outlet that has been installed in accordance with state and local building codes. (*Water may surge upon startup.*)
- Make sure the power cord hangs below the outlet so that it creates a drip loop. This will prevent water from running down the power cord into the outlet.
- The LED lights are controlled by a photocell and will automatically come on in the dark. **If** you prefer to have the lights on all the time, you will need to cover the small hole on the top of the light housing with a piece of masking tape.
- Check the water level every couple of days and refill as necessary. During operation the pump must be completely covered with water.
- If you plan to be away for more than a couple of days, make sure to unplug your fountain. Don't forget to completely dampen the top section of the fountain before turning it on.
- For more information please go to our website (www.chimes.com), or email us at woodstock@chimes.com.



Woodstock Chimes®
Shokan, NY 12481-5124
woodstock@chimes.com
www.chimes.com

02/08/07
©2007 WPI

File # 1924INS020807