
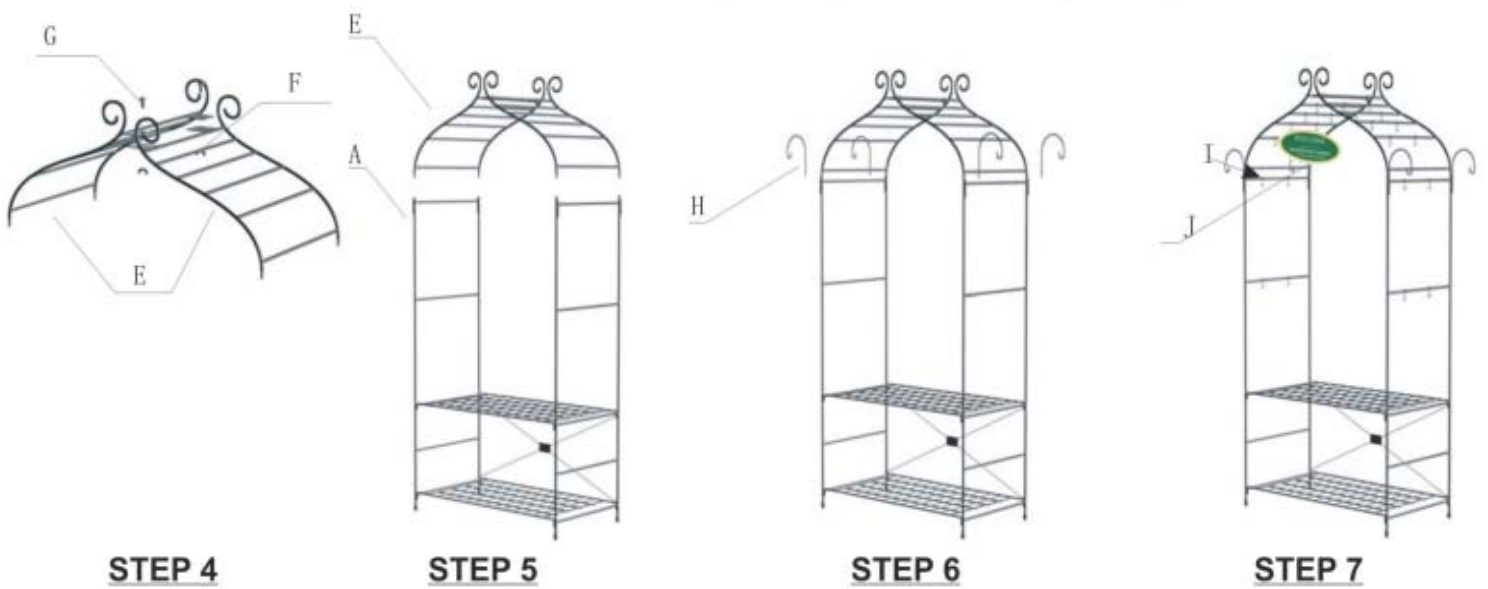


# **WOODSTOCK LARGE ARBOR DISPLAY (WACDXL)** **ASSEMBLY INSTRUCTIONS**

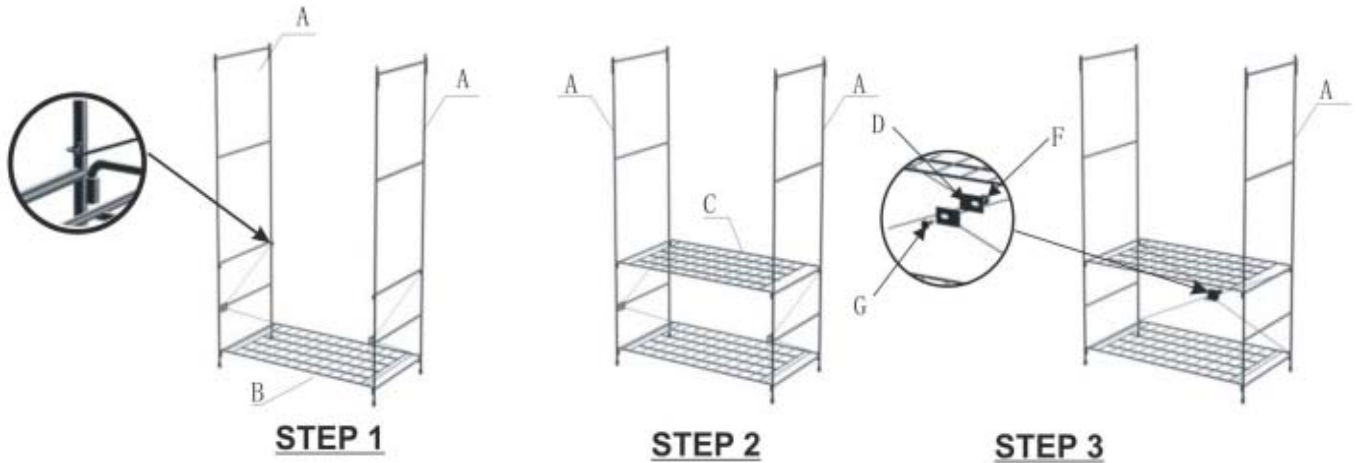

## **PARTS LIST:**

<b>A: Support Panel</b> .....	<b>2 pcs</b>	<b>G: Bolt</b> .....	<b>3 pcs</b>
<b>B: Bottom shelf grid, with extra cross wire at each end</b> .	<b>1 pc</b>	<b>H: Hook</b> .....	<b>4 pcs</b>
<b>C: Upper shelf grid</b> .....	<b>1 pc</b>	<b>I: S-hook</b> .....	<b>26 pcs</b>
<b>D: Bracket</b> .....	<b>2 pcs</b>	<b>J: Display sign</b> .....	<b>1 pc</b>
<b>E: Top frame</b> .....	<b>2 pcs</b>	<b>K: 6" Hook</b> .....	<b>6 pcs</b>
<b>F: Wing nut</b> .....	<b>3 pcs</b>	<b>L: 12" Hook</b> .....	<b>6 pcs</b>

## **ASSEMBLY:**

- STEP 1:** Insert bottom shelf grids (B) with extra cross wire at each end into the bottom location on support panels (A).
- STEP 2:** Insert upper shelf grid (C) into the upper location on the support panels (A).
- STEP 3:** Bolt brackets (D) together using one bolt (G) and one wing nut (F). Make sure brackets are pulled together tightly so the display doesn't wobble.
- STEP 4:** Attach 2 top frames (E) together with 2 wing nuts (F) and 2 bolts (G).
- STEP 5:** Insert the top frames (E) into the support panels (A).
- STEP 6:** Insert 4 hooks (H) into the support panels (A).
- STEP 7:** Use 2 S-hooks (I) to hang the display sign (J).

