

WOODSTOCK PATIO CHIME™ (PCB) ASSEMBLY AND SETUP INSTRUCTIONS

Step 1. Unpack the patio chime.

Step 2. Place the frame (1) over the base (2) making sure it rests flat on the ledge of the base.

Step 3. Insert the flat end of the center rod (3) into the center hole in the base. Make sure the tapered end is up.

Step 4. Insert the wire end of each chime (4) into each of the five outer holes. Any order of placement will work.

Step 5. Place the center assembly (5) over the center rod. The pivot cup (5A), about mid way up the assembly, should go over the tip of the center rod.

Step 6. Place the assembled patio chime on a flat, level surface. For optimum playability locate your Woodstock Patio Chime in an exposed breezy area. Make sure the wind is not blocked by obstructions such as patio furniture, walls, buildings or hedges.

If you live in a locale prone to high winds be sure to put your Woodstock Patio Chime in a sheltered area during stormy weather.

